



# Bari Rehab Platform 2™

QUICK REFERENCE GUIDE



## Siderail Adjustment

To adjust, push knob while placing siderail in desired position: up, 45°, or down.



## Expanding/Retracting Deck

Position knob to UNLOCK while pulling out/pushing in section.

Expand/retract all sections on both sides.



## Siderail Removal

To remove, pull out pin and lift siderail straight up

## Hand Control

Engage brake casters before adjusting bed.

1. Hold to flatten bed for CPR
2. Cardiac Chair position
3. Head/foot section
4. Bed height
5. Trend/Reverse Trend



## Casters

- To **ENGAGE** brake, press lever down.
- To **DISENGAGE**, raise lever.



## Code Situation

1. Unlock casters and pull bed from wall.
2. Engage brakes, remove headboard, and lower siderails for patient access.
3. Flatten bed by holding CPR button on hand control.
4. If using air surface, activate CPR switch on control unit and open CPR valve at head of mattress (if applicable).
5. Proceed with facility protocols for resuscitation.

## POWER DRIVE™ (some models)

Power Drive™ is an optional feature on Bari Rehab Platform 2™. Three different joystick configurations are available. Operating instructions are the same for all three.

## Components



1. Battery Indicator
2. Power
3. Speed Control
4. Horn
5. Joystick



## Operating Instructions

1. Secure siderails to upright and locked position.
2. Lower bed to lowest position.
3. Unplug bed and all accessories from wall and secure cords. If installed, battery backup will allow for basic bed and support surface control unit functions for a short period of time.
4. Unlock casters at head and foot sections of bed.
5. Press power button and adjust speed control. Move joystick in desired direction to move and release to stop.
6. Plug bed and all accessories back into wall outlet once transport is completed.
7. Lock casters and raise frame off Power Drive wheels to ensure proper RSS function.

**Note:** Power Drive does not move side to side, but pivots on drive wheels

**Caution:** Keep hands and feet clear of wheels during bed movement. Move only at slow walking pace. Check bed and siderail width for clearance in hallway to prevent damage to bed or other objects.

**Caution:** DO NOT push bed with drive wheels on the ground for longer than necessary, as damage to Power Drive may occur. Should you experience any type of brake malfunction or are unable to raise drive wheels, do not use bed. Call for service immediately!

**Warning:** Transport down inclines or over thresholds, including elevators, can result in damage to bed and injury to persons. Power Drive is intended for level surfaces, but is capable of climbing a 5 degree incline if necessary. Extra care should be taken when transitioning at top and bottom of ramps. Loss of traction may cause damage to bed and injury to persons.

## Power Failure

In case of power failure, choose one of the following steps to raise drive wheels:

- Plug bed into available wall power source.
- Plug bed and all accessories into battery backup.
- Use manual hand crank (see below).

# REST SECURE SYSTEM™

## System Setup

1. Plug into wall AC power.
2. Plug in Nurse Call interface.
3. Plug in Hand Control.

## Zero Scale

Press and hold **ZERO** for 3 seconds.

## Add/Remove Items

Press **UP** or **DOWN**.

Select **Add/Remove Items** and press **ENTER**.

Press **ENTER** after changes are made.

## Weighing Patient

Press **ENTER**.

View patient weight on monitor.

System will enter standby after 60 seconds of inactivity.

## To Change Units

Press **UP** or **DOWN** button and select scale settings.

Select **CHANGE LBS/KGS** and press **ENTER**.

Select **CHANGE TO LBS** or **CHANGE TO KGS** and press **ENTER**.

## Bed Exit Alarm

### Activate Alarm

Patient must be in bed prior to activation.

Press **BED EXIT** to select desired sensitivity.



#### High Sensitivity:

Detects patient movement. Do not use with alternation surface.



#### Medium Sensitivity:

Detects patient attempting exit. Do not use with rotation surface.



#### Low Sensitivity:

Detects when patient has exited the bed.

### Disable Alarm

Press **ENTER** and hold for 3 seconds to silence and disable alarm.

Bed exit alarm must be reactivated after being disabled.

### Reset Alarm

Place patient back in bed. Press **ENTER** to reset the alarm and restart the monitoring process.

## Adjusting Alarm Volume


Press **VOLUME** button to select desired sound level.

**NOTE:** When bed exit alarm/protocol timer are disabled, the sound level indicator lights will be off.

## Protocol Timer

Press **TIMER** button to select desired time: 1, 2 or 4 hours.

**To disable:** Press timer button until indicator lights are off.

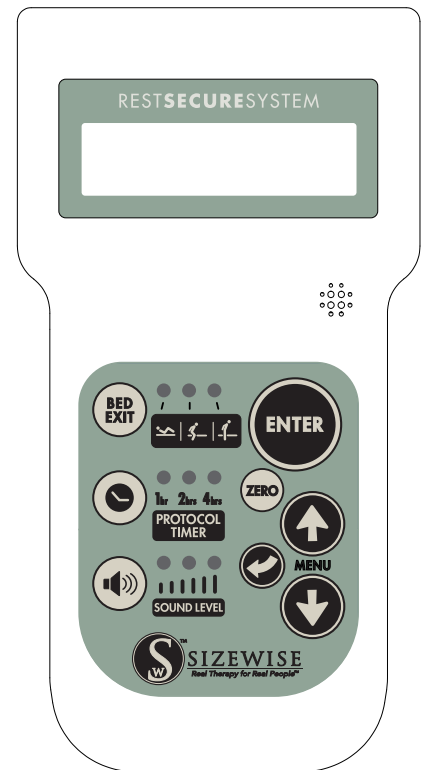

## Hand Crank

Located under foot section of deck, mounted to motor box cover.

Remove crank and insert into desired function. Crank either clockwise or counterclockwise to operate. Bed functions located at both foot and head section of bed.



## Troubleshooting

### If bed fails to function:

1. Verify power cord is properly plugged in.
2. Verify main power switch is turned on.
3. Verify hand control is plugged into control module at head of bed.
4. Verify power source.