



### Siderail Adjustment

Squeeze knobs while placing siderail in desired position.



### Expanding/Retracting Deck

Position knob to UNLOCK while pulling out/pushing in section.

Expand/retract all sections on both sides.



### Siderail Removal

Pull out pin and lift siderail straight up.

### Hand Control

Engage brake casters before adjusting bed.

1. Hold to flatten bed for CPR
2. Cardiac Chair position
3. Head/foot section
4. Bed height
5. Trend/Reverse Trend



### Casters

- To **ENGAGE** brake, press lever down.
- To **DISENGAGE**, raise lever.



### Code Situation

1. Unlock casters and pull bed from wall.
2. Engage brakes, remove headboard, and lower siderails for patient access.
3. Flatten bed by holding CPR button on hand control.
4. If using air surface, activate CPR switch on blower and open CPR valve at head of mattress (if applicable).
5. Proceed with facility protocols for resuscitation.

## REST SECURE SYSTEM™

### System Setup

1. Plug into wall AC power.
2. Plug in Nurse Call interface.
3. Plug in Hand Control.

### Zero Scale

Press and hold **ZERO** for 3 seconds.

### Add/Remove Items

Press **UP** or **DOWN**.

Select **Add/Remove Items** and press **ENTER**.

Press **ENTER** after changes are made.

### Weighing Patient

Press **ENTER**.

View patient weight on monitor.

System will enter standby after 60 seconds of inactivity.

### To Change Units

Press **UP** or **DOWN** button and select scale settings.

Select **CHANGE LBS/KGS** and press **ENTER**.

Select **CHANGE TO LBS** or **CHANGE TO KGS** and press **ENTER**.

### Bed Exit Alarm

#### Activate Alarm

Patient must be in bed prior to activation.

Press **BED EXIT** to select desired sensitivity.



#### High Sensitivity:

Detects patient movement. Do not use with alternation surface.



#### Medium Sensitivity:

Detects patient attempting exit. Do not use with rotation surface.



#### Low Sensitivity:

Detects when patient has exited the bed.

#### Disable Alarm

Press **ENTER** and hold for 3 seconds to silence and disable alarm.

Bed exit alarm must be reactivated after being disabled.


#### Reset Alarm

Place patient back in bed. Press **ENTER** to reset the alarm and restart the monitoring process.

### Adjusting Alarm Volume

Press **VOLUME** button to select desired sound level.

**NOTE:** When bed exit alarm/protocol timer are disabled, the sound level indicator lights will be off.

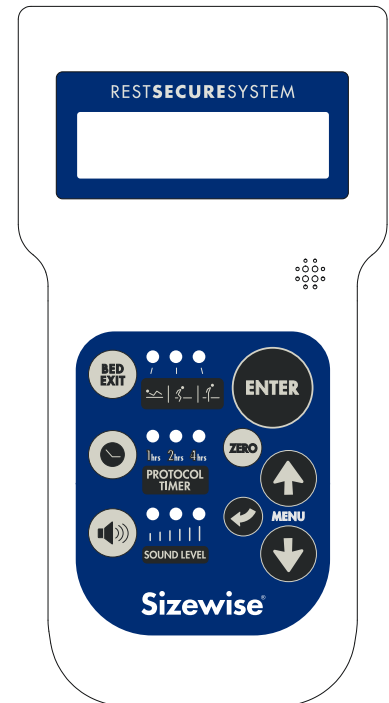

### Protocol Timer

Press **TIMER** button to select desired time: 1, 2 or 4 hours.

**To disable:** Press timer button until indicator lights are off.

## POWER DRIVE 360™ (some models)

### Components

- Emergency Stop:** Shuts off device in an emergency situation.
- Horn**
- Speed Control:** Sets device speed.
- Power Switch:**  
ON = Drive wheel is lowered for transport.  
OFF = Drive wheel is retracted.
- Directional Switches:** Selects which direction the motor will drive the device.
- Battery Gauge**
- Control Throttle:** Activates movement.

### Operating Instructions

- Lower bed to lowest position.**  
FAILING TO DO SO MAY CAUSE DAMAGE TO POWER DRIVE.
- Secure siderails to upright and locked position. Ensure power drive control is in upright position.
- Unplug bed and all accessories from wall and secure cords. If installed, battery backup will allow for basic bed or blower functions for a short period of time, depending on which is plugged into battery.
- Unlock casters at head and foot sections of bed.
- Press power button to turn Power Drive on.
- Adjust speed. Start at low speed until familiar with unit.
- Set direction and allow for drive wheel to reposition. To change direction, come to a complete stop, press directional button, and allow drive to reposition.
- Pull control throttle to engage drive.
- Power unit off by pressing power button. Drive wheel will raise.
- Lock casters, plug bed and all accessories back into wall outlet once transport is completed.

**Caution:** Keep hands and feet clear of wheels during bed movement. Move only at slow walking pace. Check bed and siderail width for clearance in hallway to prevent damage to bed or other objects.

**Caution:** DO NOT push bed with drive wheel on ground as damage to Power Drive may occur. Should you experience any type of malfunction or are unable to raise drive wheels, use emergency release button (under deck, patient right, center of bed). Push button to raise drive wheel.

**Warning:** Transport down inclines or over thresholds—including elevators—can result in damage to bed and injury to persons. Power Drive is intended for level surfaces, but can climb a 5° incline if necessary. Extra care should be taken when transitioning at top and bottom of ramps. Loss of traction may cause damage to bed and injury to persons.

### To Raise/Lower Power Drive Control



1. Pull black knob



2. Slide silver handle up



3. Rotate unit to the left



4. Rest at lowest position

To return control to upright position, follow directions in reverse.

*Note: Power drive control MUST be in lowered position in order to remove headboard. Manufacturer recommends keeping control in lowered position when not in use for quick headboard removal.*

### Hand Crank

Located under foot section of deck, mounted to motor box cover.

Remove crank and insert into desired function. Crank either clockwise or counterclockwise to operate. Bed functions located at both foot and head section of bed.

### Troubleshooting

**If bed fails to function:**

- Verify power cord is properly plugged in.
- Verify main power switch is turned on.
- Verify hand control is plugged into control module at head of bed.
- Verify power source.

This guide is not meant to replace the product user manual. For additional product support, call **800-814-9389**.

OPS-0029-0623 Combines legacy QRGs 27650034, 27650042 and 27650000. See user manual for full content.

